



KTM 1050/1190/120 Pannier Rack

Installation Guide

A qualified, experienced motorcycle technician should install Rockfox products. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. Rockfox takes no responsibility for damages caused by improper installation. All screws, bolts and nuts, including all replacement hardware provided by Rockfox, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used: M6 – 9,6Nm; M8 – 23Nm; M10 – 46Nm. All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque. Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws bolts and nuts.

Tools required: M8 Allen key
13mm Spanner
10mm Socket

Contents: 1 x Left Side Rack
1 x Right Side Rack
1 x Rear Brace
1 x Pack of bolts

Left Side

Step 1



Remove the lower left OEM Pannier Bracket.

Step 2



Remove the plastic top left OEM Pannier Bracket

Step 3



Fit the left top part of the rack using the following configuration.

From Front


M8x20 + washer and 5mm Allu Spacer

M8x35 + washer and 15mm Allu Spacer

M8x50 + washer and 30mm Allu Spacer

Do not fully tighten bolts

Step 4

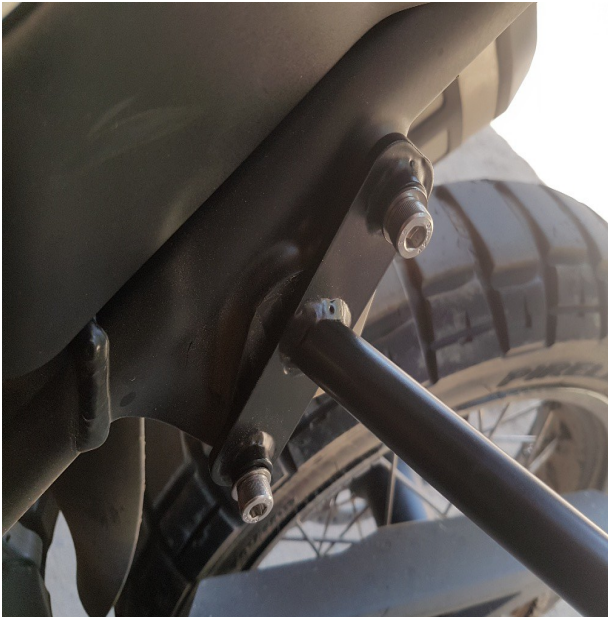

Fit Lower Left Of pannier rack to the bike using the supplied M8x35 bolts.

Do not fully tighten bolts

Repeat Step 1 - 3 for the right hand side.

Step 5



Fit the right hand bottom bracket using the M8x50 on the top most bolt and the M8x35 on the lower bolt.

Please note the exhaust bracket needs to be aligned.

Step 6

Attach the rear brace to the racks and then fully tighten the racks to the bike.

Final product



Please contact us if any problems occur.

Regards
The Rockfox Team