



KTM 790/890 - Husqvarna 901 Pannier Rack

Installation Guide

A qualified, experienced motorcycle technician should install Rockfox products. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. Rockfox takes no responsibility for damages caused by improper installation. All screws, bolts and nuts, including all replacement hardware provided by Rockfox, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used: M6 – 9,6Nm; M8 – 23Nm; M10 – 46Nm. All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque. Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws bolts and nuts.


Right Hand side

Step 1



Remove the front of the two OEM bolts
As indicated in the photo.


Step 2

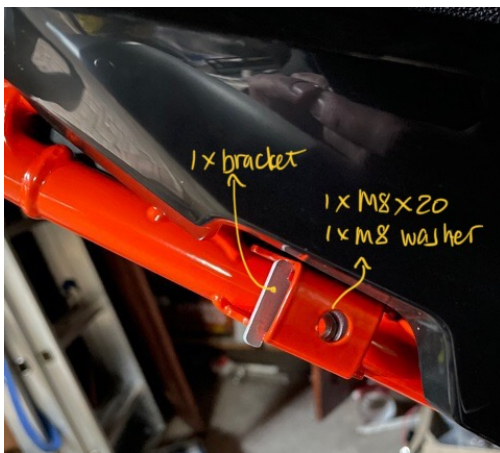

Use the supplied T-Bracket and insert it into
bracket as indicated in the photo.

Please note on the Husqvarna 901 the panel
needs to be removed and a small black cover to
be removed from the panel to expose the bracket.

Step 3

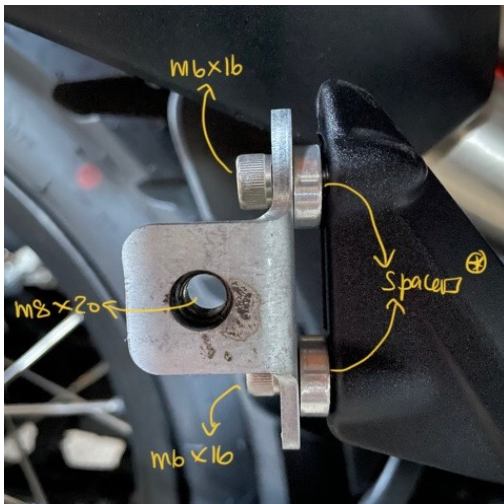

Using 2 M6x16 bolts with 2x small aluminium spacers to fit the angle bracket to the pillion footpegs of the motorcycles.

Step 4



Fit the pannier rack using the OEM top bolt and the supplied M8 bolts with spacers to the brackets added in the previous steps.

Please note on the Norden 901 we have supplied 3 extra 5mm spacers to shift the pannier rack away from the exhaust.

Repeat steps 1, 2, 3 and 4 on the left hand side.

Step 6

Fit the rear brace between the two pannier racks and tighten all bolts.

Final Product



Please contact us if any problems occur or if bars are difficult to fit.

Regards
The Rockfox Team