



Suzuki 800 V-Strom Bashplate


Installation Guide

A qualified, experienced motorcycle technician should install Rockfox products. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. Rockfox takes no responsibility for damages caused by improper installation. All screws, bolts and nuts, including all replacement hardware provided by Rockfox, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used: M6 – 9,6Nm; M8 – 23Nm; M10 – 46Nm. All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque. Medium strength liquid thread-locker (i.e., "Loctite") should be used to secure all screws bolts and nuts.

Step 1

Remove the OEM bashplate.

Step 2

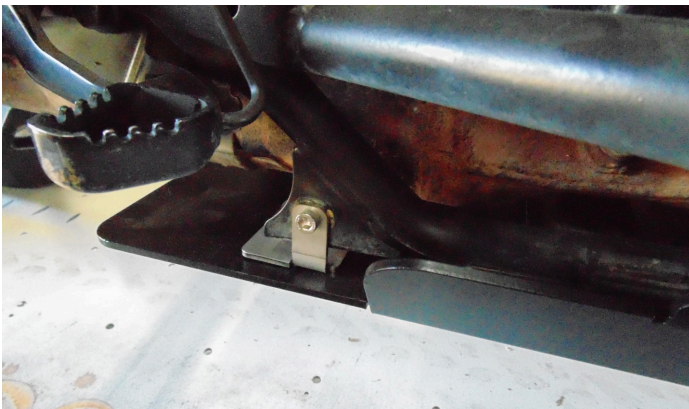

Fit the rear bracket to the motorcycle with the supplied M6 bolts including washers.

Step 3



Fit the front of the bashplate to the motorcycle with the supplied M6x45 countersunk bolts. as well as in the rear to the bracket with the M6x16 Countersunk bolts.

Step 4 & Final Product



Tighten all bolts

Please contact us if any problems occur or if bars are difficult to fit.

Regards
The Rockfox Team