



Yamaha Ténéré 700 Crashbar

Installation Guide

A qualified, experienced motorcycle technician should install Rockfox products. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. Rockfox takes no responsibility for damages caused by improper installation. All screws, bolts and nuts, including all replacement hardware provided by Rockfox, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used: M6 – 9,6Nm; M8 – 23Nm; M10 – 46Nm. All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque. Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws bolts and nuts.


Contents:

- 1 x Left Side Upper Crashbar
- 1 x Right Side Upper Crashbar
- 1 x Left side Lower Crashbar
- 1 x Right Side Lower Crashbar
- 1 x Left Bracket
- 1 x Right Bracket
- 1 x Top Bracket
- 1 x Bolt Pack

**Please note we removed the panels to allow better photos, this is not needed
ALSO Do only one side of the brackets at a time.**


Left Side

Step 1

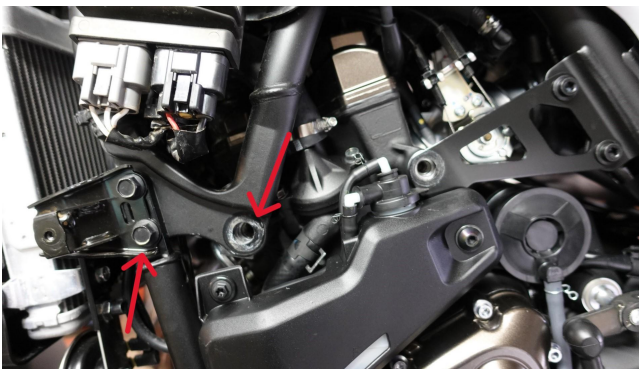

Remove the 2 factory bolts pictured in the picture


Step 2

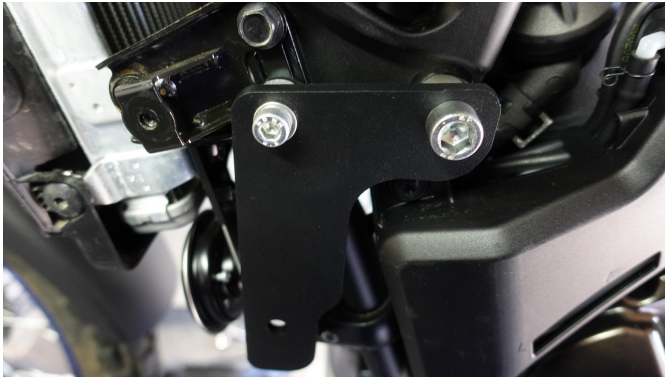

Fit the bracket using the supplied M12 fine thread bolts using the 20x20x13 spacer between the plate and the bike. Also fit the front bolt M8x40 using the 20x10x9 spacer between the bike and the bracket.

Do not tighten fully but tighten so that the plate still has the ability to move.

Step 3

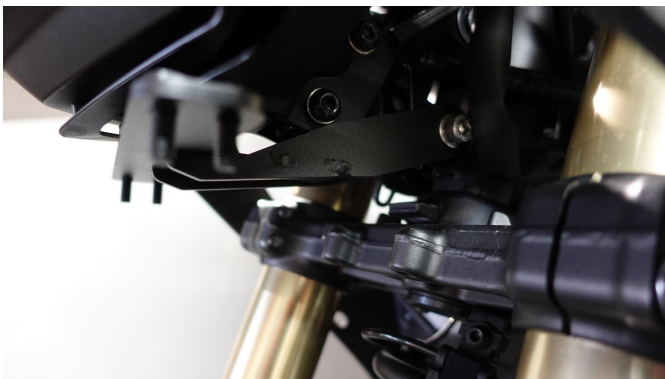


Remove the lower bolt from the motorcycle neck and fit the upper crashbar bracket using the M8x55 with washers and nylock nut supplied.

Step 4 (Left Side)



Fit the lower left Crashbar by undoing the bolt in the picture and fixing the crashbar to the bike. using a supplied M8x25 bolt with washers and a nylock nut fit it to the front bracket previously installed.

Step 5

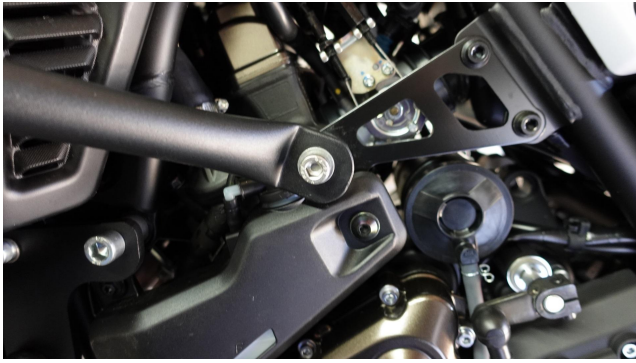

Fit the Left upper crashbar by undoing the upper mount in the photo on the left, then using the supplied M10 fine thread bolt with washer attach the crashbar to the bike along with the 20x5x11 spacer. Insert the front top to bolts through the holes and fix with supplied M6 washers and Nylock nuts, then undoing the bolt previously holding the lower bar to the bracket fit the upper crashbar on top of the lower as in the picture on the right.

Tighten All bolts and double check.

Step 6 Repeat all the above for the right hand side with the exception of the right hand bracket. As shown below



Fit the right hand bracket using the supplied M8x35 and the 20x5x9 spacer between the bracket and the motorcycle.

Step 7

Go through all bolts and nuts a third time to check that they have all been securely fastened. After the first 50 or so km, recheck again.

Final product



Please contact us if any problems occur or if bars are difficult to fit.

Regards
The Rockfox Team